


## SNDLC: USING THE WIRELESS SPEAKER / MICROPHONE SYSTEM

If the speaker unit is plugged in for charging, unplug it and place the unit in the vicinity of the participants. The speaker does not have to be directly in front of the participants.

1. Check to see that “Ready” is displayed in the read-out window
2. Press the “Phone” button

Phone Button

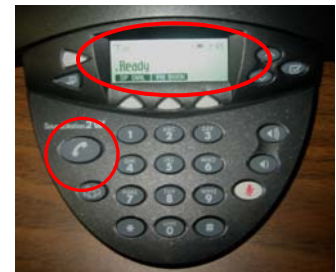

3. The message in the read-out window changes to “Enter Number” and the green lights on top of the speaker unit are now lit.

**Note:** You will not be required to enter a number.



4. Check the Q-Link box to ensure that the green “link” button is lit. If it is not lit, move the speaker unit into a more direct line of visual (wireless) contact with the Q-Link box.

**Note:** The Q-Link box is located on your cart



### THE SPEAKER / MICROPHONE IS READY TO USE

5. To adjust the volume, press the “Volume Up” or “Volume Down” buttons
6. At the end of your session, press the “Phone” button
7. You will briefly see the message “Call Ended” in the read-out window, followed by “Ready.” **Your session is now ended.**
8. When not in use, the speaker unit should be plugged in for recharging. Simply place the speaker unit back in / on the cart, and plug the AC adapter cord into the connection located on the side of the speaker unit.

Phone Button



Volume Up / Down Buttons

